

BA3028 QUICK PROGRAMMING GUIDE

(Default Master Code: 111111) **1000 Card Users (V2)**

Technical Support:

Entrypass 7cfdcfUjcb Sdn. Bhd. (593438-M)
No. 40, Jalan TPP 1/10, Taman Industri Puchong, Bt. 12,
Jalan Puchong, 47100 Puchong, Selangor Darul Ehsan.
Tel: 603 - 8068 1929 Fax: 603 - 8068 1922
Web Site: www.entrypass.net

1. Cold Start (Reset)

- Off Power
- Press * and # (hold together)
- On power
- Beeper sounded
- Release both keys

2. Install Card (first time)

- Key in Master Code (6 digits)
- Press #
- Press 4 & Press #
- Scan card
- Press # x 3 (to complete install card operation)

5. Card Only Mode

- Key in Master Code (6 digits)
- Press #
- Scan any user card
- Key in *+1
- Press # (to confirm setting)

8. Change PIN

- Key in Master Code (6 digits)
- Press #
- Scan any user card
- Press *
- Enter new PIN number (4 digits)
- Press # x 2 (to exit operation)

11. Sensor Activation (Step 1)

- Key in Master Code (6 digits)
- Press #
- Scan any user card
- Key in 881
- Press # (to confirm setting)

3. Install Card (following time)

- Key in Master Code (6 digits)
- Press #
- Scan any user card
- Press 4 & Press #
- Scan card (continuous scan)
- Press # x 3 (to complete install card operation)

6. Card + PIN Mode

- Key in Master Code (6 digits)
- Press #
- Scan any user card
- Key in *+2
- Press # (to confirm setting)

9. Lock Release Time

- Key in Master Code (6 digits)
- Press #
- Scan any user card
- Press 1
- Enter required time [01-99 sec] (2 digits)
- Press # x 2 (to exit operation)

12. Sensor Activation (Step 2)

- Key in Master Code (6 digits)
- Press #
- Scan any user card
- Key in 3XX (XX indicates door open time : 1 - 99 sec)
Eg: 308 = 8 seconds
- Press # (to confirm setting)

4. Delete Card

- Key in Master Code (6 digits)
- Press #
- Scan any user card
- Press 6 & Press #
- Scan card to be deleted (continuous scan if more than one card)
- Press # x 2 (to exit operation)

7. Card or PIN Mode

- Key in Master Code (6 digits)
- Press #
- Scan any user card
- Key in *+3
- Press # (to confirm setting)

10. Change Master Code


- Key in old Master Code (6 digits)
- Press #
- Scan any user card
- Press *
- Key in New Master Code (6 digits)
- Press # x 2 (to exit operation)

13. Sensor Activation (Step 3)

- Key in Master Code (6 digits)
- Press #
- Scan any user Card
- Key in 841
- Press # (to confirm setting)

14. NO / NC

- Key in Master Code (6 digit) Press #
- Scan any card
- key in 861 (NO 860) Press # #

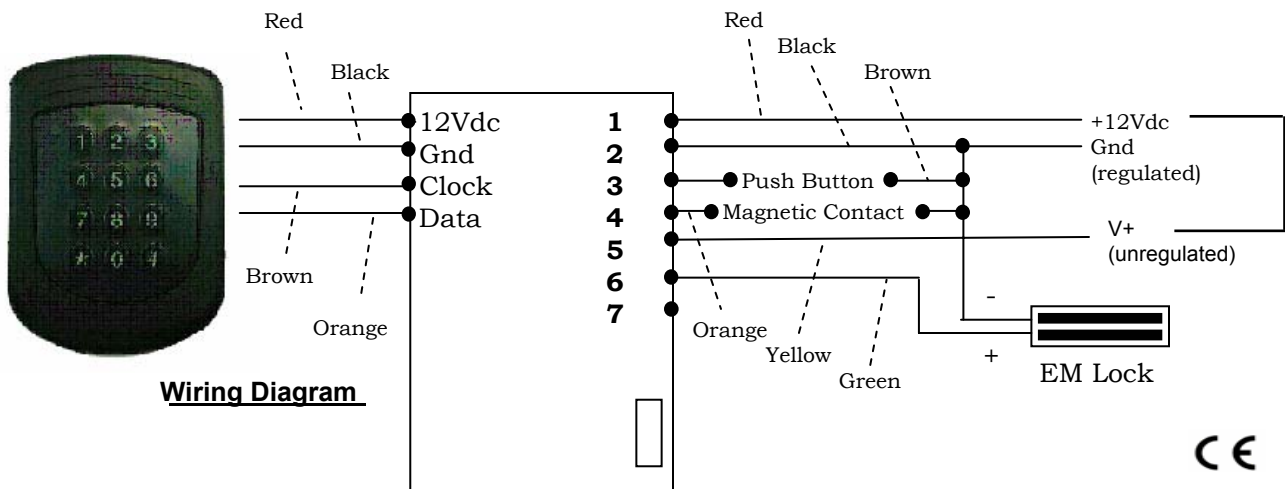

ISO 9001
Certified